

60cm freestanding dishwasher, white, with 14 place settings, 6 wash programs including Fast 30' and Auto programs, FastDry system, half load option, adjustable upper basket and 47dB operation.



Product Details

FEATURES

14 place settings

Auto mode

FastDry

Fast wash options

Gentle Wash

Delay Start - 3, 6 & 9 hours

Half load option

Height adjustable upper basket

AquaStop

BENEFITS

Adjusting the right cycle for you

Sensing the level of grime on your dishes, our smart sensor adjusts the temperature and wash cycle to ensure the best results possible.

Fast drying time

Say goodbye to damp dishes with our FastDry system. Our system dehumidifies hot steam before expelling it from the dishwasher, ensuring minimal humidity remains. So whether its a big gathering and you need a plate fast or you just want to pack them away, FastDry is convenience made simple.

Big Items? No Problems. Slide and stack.

Large items can now fit with ease in the bottom basket with our height adjustable upper basket. Simply remove the upper basket and place back onto the rails to fit awkward items in.

Gentle care for glassware

Protect your delicate and most-loved glassware with our specially designed Gentle Wash program. Whether its champagne flutes, fine wine glasses, or sentimental pieces. Its the perfect way to ensure your fragile items are treated with care, while still coming out sparkling clean and ready to impress.

Fast wash, when you need it

Whether youre hosting a party or forgot to put the dishwasher on, our fast 30 and fast 58 minute programs ensure you can be ready in no time.

Specifications

PRODUCT PROFILE

Domestic warranty details (yrs)	2
Type of Dishwashers	freestanding
Place settings	14
Drying system	turbo dry
Number of spray arms	2
Top shower	Yes

DIMENSIONS

Total height (mm)	845
Total width (mm)	598

SPECIFICATION

Water Efficiency Star Rating	5
WELS Registration Number	D03032
Water consumption (litres)	11.5
Energy Efficiency Star Rating	3.5
Energy consumption cold water (kWhr/yr)	275
Noise level dBA	47
Water supply	cold or hot (maximum 60°C)
Basket colour	grey
Service cord length	150

WASH PROGRAMS

Number of Programs	6
Programs	Auto,Eco,Fast 30",Fast 58",Gentle,Intensive

DIMENSIONS

Total depth (mm)	598
Height adjustment (mm)	20

CONTROL PANEL

Control panel type	LED Display
Top mounted control panel	No
Control panel finish	black
Knob or button finish	black
Display indicators	rinse aid,on/off ,wash program,half load ,delay start,start ,ExtraDry

EXTERIOR

Door finish	white
Side colour	white

WASH PROGRAMS

Wash option	Half Load,Extra dry,Power Wash
-------------	--------------------------------

FEATURES

Other Features	delay start,Soil Level Sensor,child lock on control panel
Water safety system	overflow protection,aqua control
Filter system	3 stage
Dispenser	detergent,rinse aid
Number of spray levels	2

UPPER BASKET

Upper basket features	adjustable top basket,Knifeshelf
Foldable cup shelves	2
Foldable Racks	6

LOWER BASKET

Lower Basket Features	cutlery basket
Foldable Racks	4

SHIPPING

Shipping Weight (Kg)	46
Pack Dimensions Height (mm)	885
Pack Dimension Width (mm)	645
Pack Dimension Depth (mm)	645

HOSES

Inlet hose length	180
Drain hose length	167
Inlet hose length (metres)	180
Drain hose length (metres)	167

 
STUFFING QUANTITIES

20ft	54
40ft	108
40ft HC	159


Dimensions

Freestanding Dishwasher

WSF6602WC / WSF6602XC
WSF6604XC
WSF6606KXC / WSF6606XC
WSF6608KXC / XC

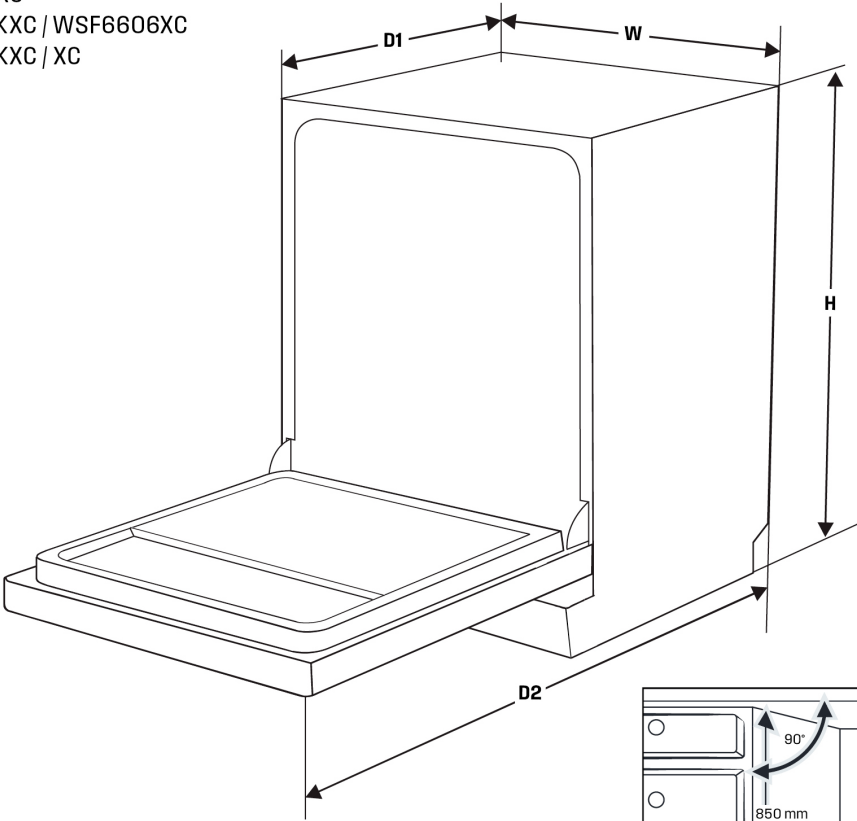

	Width	Height	Depth 1	Depth 2
Cut out (mm)	600	850	580	-
Product (mm)	598	845	598	1175

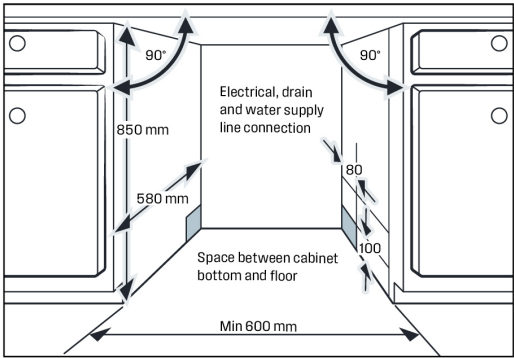 

IMPORTANT

These dimensions are a guide only. All measurements are in millimetres (mm).
For complete installation instructions, refer to the manual provided with product.
© 2025 Electrolux Home Products Pty Ltd. ABN 51 004 762 341. WHS_IM_Diag_Freestanding_Dishwasher_Aug25

Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products Pty Ltd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640

fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230

fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz