
MODIA WALL FACED () 📀 🔶

CERAMIC TOILET SUITE

OPTIONS

SEAT

TOILET

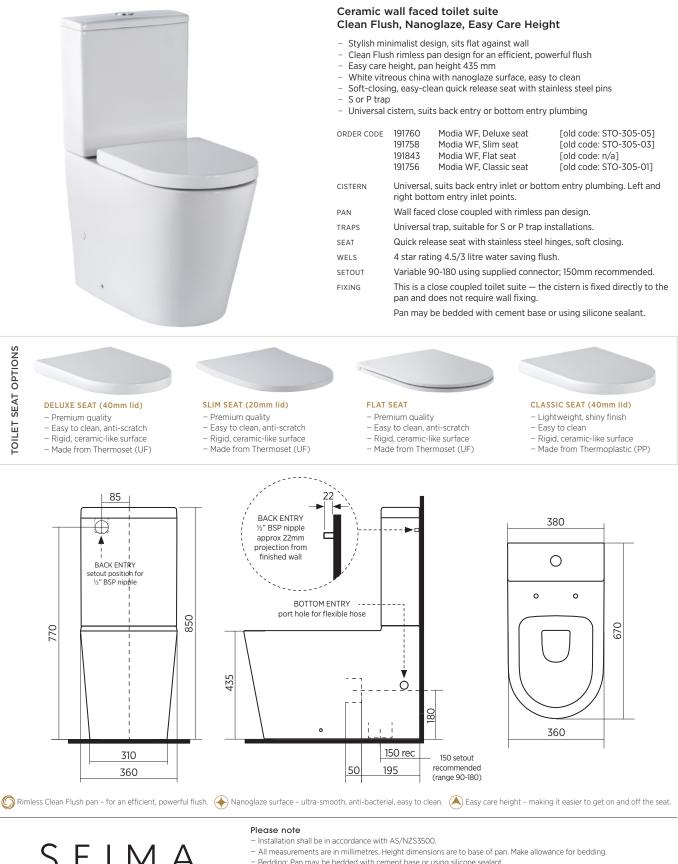



- Bedding: Pan may be bedded with cement base or using silicone sealant.
- Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement. - Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives. Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.

bathroom | kitchen | laundry