

MODIA CARE WALL FACED



CERAMIC TOILET SUITE

AS1428.1 ACCESSIBLE



Optional backrest (stainless steel)

Care WF toilet suite — Rimless Clean Flush, Easy Care Height Choice of blue or white seat

- Stylish minimalist design, sits flat against wall
- Clean Flush rimless pan design for an efficient, powerful flush
- Easy care height, pan height 440 mm
- White vitreous china
- Care toilet seat, soft closing, quick-release for easy removal and cleaning
- Optional stainless steel backrest
- S or P trap, back entry or bottom entry plumbing

Order codes


- 191856 Modia Care WF toilet with BLUE seat
- 191857 Modia Care WF toilet with WHITE seat

BACKREST


- 191971 Backrest to suit Modia Care toilets, stainless steel

Product details

- CISTERN** Suits back entry inlet or bottom entry plumbing. Left and right bottom entry inlet points.
- PAN** Wall faced close coupled with rimless pan design.
- MATERIAL** White vitreous china.
- BUTTONS** Raised flush buttons, full flush and half flush.
- TRAPS** Universal trap, suitable for S or P trap installations.
- SEAT** Care toilet seat. Quick release seat with stainless steel hinges, soft closing.
- BACKREST** Optional backrest: 32 mm stainless steel, 304 grade, brushed finish, AS1428 compliant.
- WELS** 4 star rating 4.5/3 litre water saving flush.
- SETOUT** Variable 75-280 mm.
- FIXING** This is a close coupled toilet suite — the cistern is fixed directly to the pan and does not require wall fixing.
Pan may be bedded with cement base or using silicone sealant.

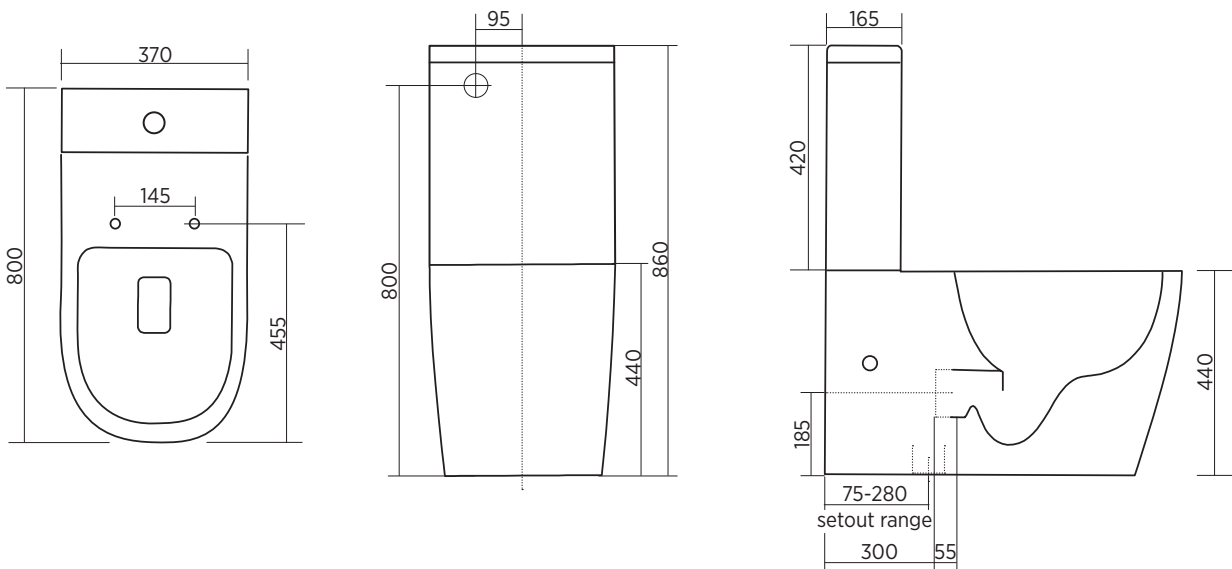

 Rimless Clean Flush pan – for an efficient, powerful flush.

 Easy care height – making it easier to get on and off the seat.

SEIMA

bathroom | kitchen | laundry

seima.com.au

Please note

- Installation shall be in accordance with AS/NZS3500.
- All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant.
Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.
- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.

modia-care-wf-ds | v 4.0