

Modia Care Wall Faced – 800mm



Collection: Elevate

AS1428.1 Accessible



Optional backrest (stainless steel)

Modia Care wall faced toilet suite

- Rimless Clean Flush, Easy Care Height
- Choice of grey, blue or white seat

- Stylish minimalist design, sits flat against wall
- Clean Flush rimless pan design for an efficient, powerful flush
- Easy care height, pan height 440 mm
- White vitreous china
- Care toilet seat
- Optional stainless steel backrest
- S or P trap, back entry or bottom entry plumbing

Order codes

192418	Modia Care WF toilet with GREY seat
191856	Modia Care WF toilet with BLUE seat
191857	Modia Care WF toilet with WHITE seat

BACKREST




191971	Backrest to suit Modia Care toilets, stainless steel
--------	--

OPTIONAL SETOUT CONNECTOR

X6000016	Connector for setout 75-215 mm
----------	--------------------------------

Product details

CISTERN	Suits back entry inlet or bottom entry plumbing. Left and right bottom entry inlet points.
PAN	Wall faced close coupled with rimless pan design.
MATERIAL	White vitreous china.
BUTTONS	Raised flush buttons, full flush and half flush.
TRAPS	Universal trap, suitable for S or P trap installations.
SEAT	Care toilet seat, available in Blue and White. Seats are available separately as spare parts.
BACKREST	Optional backrest: 32 mm stainless steel, 304 grade, brushed finish, AS1428 compliant.
WELS	4 star rating 4.5/3 litre water saving flush.
SETOUT	Variable 190-280 mm. Optional connector setout range 75-215 mm (code X6000016).
FIXING	This is a close coupled toilet suite — the cistern is fixed directly to the pan and does not require wall fixing. Pan may be bedded with cement base or using silicone sealant.

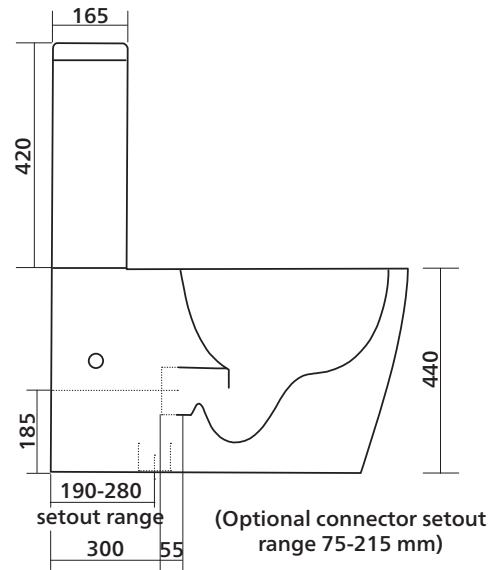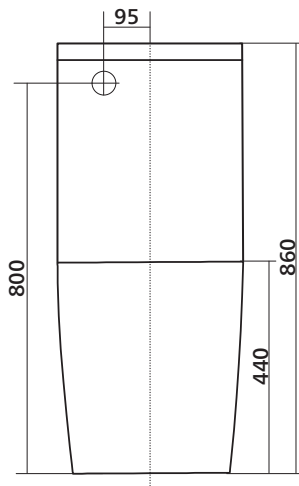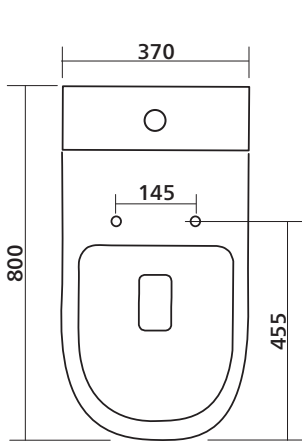

Rimless Clean Flush pan – for an efficient, powerful flush.

Easy care height – making it easier to get on and off the seat.

SEIMA

kitchen + laundry + bathroom ware

seima.com.au

Please note

- Installation shall be in accordance with AS/NZS3500.
- All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant. Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.

- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.