

Select Care Link Toilet Suite



Former name: Select Care Link Toilet Suite

AS1428.1 Accessible



Optional backrest (stainless steel)

Select Care link toilet suite

- Rimless Clean Flush, Easy Care Height
- Choice of ceramic or plastic cistern

- Clean Flush rimless pan design for an efficient, powerful flush
- Easy care height
- White vitreous china
- Care toilet seat, blue
- Optional stainless steel backrest
- S trap, bottom entry plumbing

Order codes


CERAMIC CISTERN OPTION
192110 Select Care link toilet with CERAMIC cistern, blue seat

PLASTIC CISTERN OPTION
192111 Select Care link toilet with PLASTIC cistern, blue seat

BACKREST - OPTIONAL EXTRA
191971 Backrest to suit Care toilets, stainless steel

Product details

CISTERN	Suits bottom entry plumbing. Left and right bottom entry inlet points.
PAN	Link style pan with rimless Clean Flush design.
MATERIAL	White vitreous china pan. Choice of ceramic or plastic cistern.
BUTTONS	Raised flush buttons, full flush and half flush.
TRAPS	S trap installation.
SEAT	Care toilet seat, blue.
BACKREST	Optional backrest: 32 mm stainless steel, 304 grade, brushed finish, AS1428 compliant.
WELS	4 star rating 4.5/3 litre water saving flush.
SETOUT	Recommended setout 300 mm
FIXING	This is a link toilet suite. The cistern requires wall fixing. Pan may be bedded with cement base or using silicone sealant.

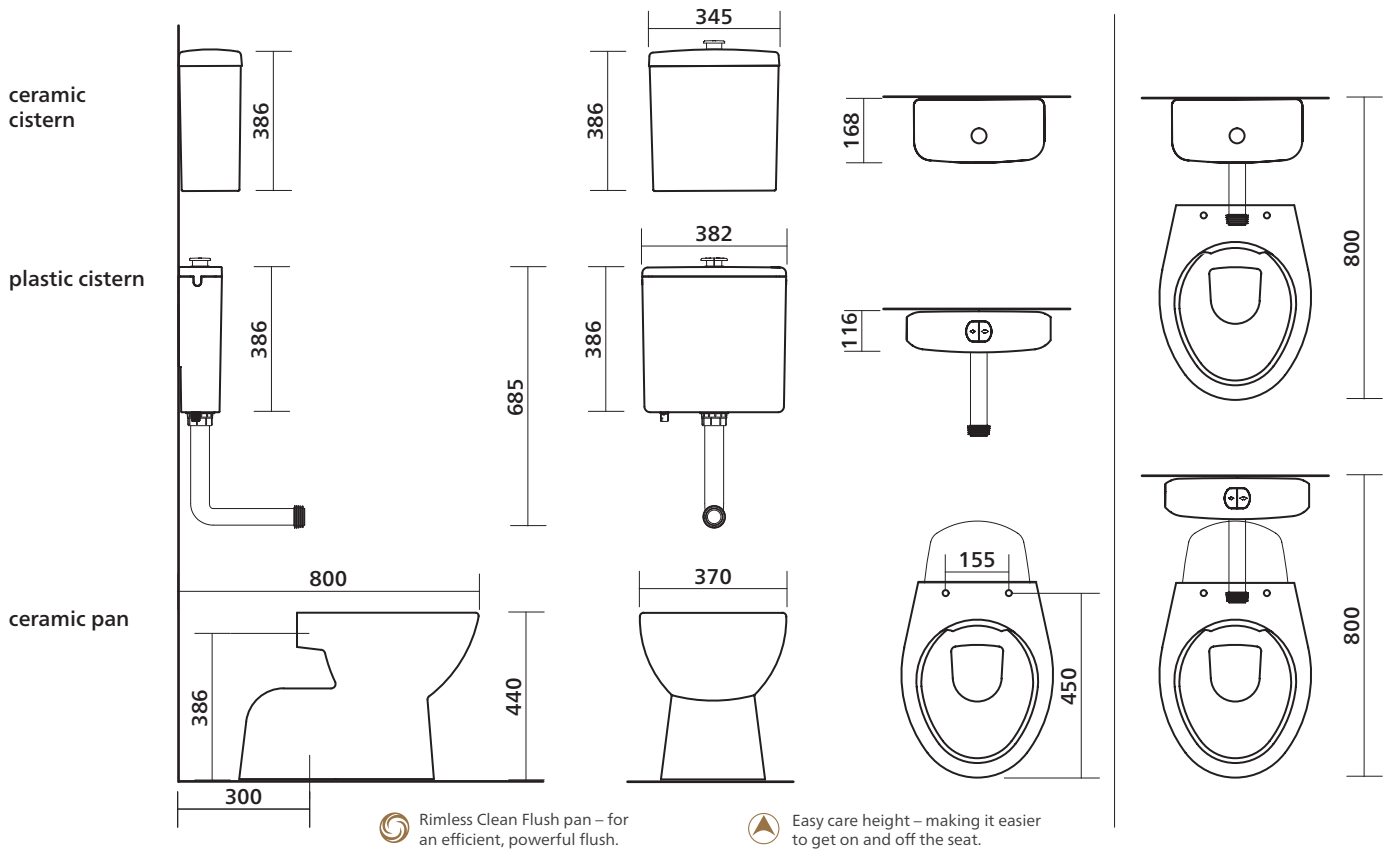

Rimless Clean Flush pan - for an efficient, powerful flush.

Easy care height - making it easier to get on and off the seat.

SEIMA

kitchen + laundry + bathroom ware

seima.com.au

Please note

- Installation shall be in accordance with AS/NZS3500.
- All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Pan may be bedded with cement base or using silicone sealant. Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.

- Bracket fixing: The pan should be bedded with silicone sealant and fixed with the brackets supplied.
- Do NOT use epoxy type adhesives.
- Dimensions are nominal and subject to normal ceramic manufacturing variations.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.